

---

## Scooter won't stop running.

Posted by sparks - 2009/10/07 17:11

---

My faithful 2004 R4i won't stop running when I turn off the ignition switch. Obviously it's a switch problem, but I haven't figured how to get at it. Has anyone been there before?

=====

## Re:Scooter won't stop running.

Posted by sparks - 2009/10/12 15:51

---

Problem solved: Took off the Tupperware. Tested the switch sequence of the ignition switch, ok. Tested the kill switch, ok. Scooter running fine now. If it happens again, if the kill switch wont stop it, it's the ignition switch. If the kill switch won't stop it, it's the alarm system module.

=====